


# THT PRINTER BBP11



- Specially-designed small core media rolls and ribbons provide fast installation and reduce change-over time
- Compatible with 3" core media rolls if using the external media holder (sold separately)
- Easy set-up & calibration
- Compact size won't clutter your workplace or bench
- Sharp 300 dpi printing on labels up to 4" wide
- Fast print speed—up to 76.2mm per second
- Large varieties of labels including external-feed bulk rolls
- Centering ribbon spindle virtually eliminates ribbon wrinkling

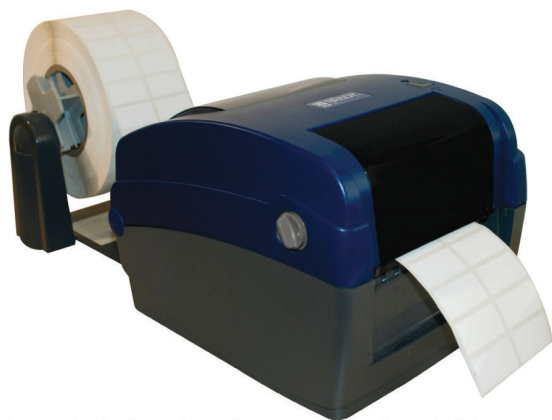

## Efficiency, Versatility and Performance all pack into one multi-use printer.

The BBP™ 11 is a compact desktop label printer ideal for laboratory, wire and cable and general asset identification. With an output of up to 1,500 labels per day and print speed of 76.2mm per second, the BBP™ 11 provides a cost-effective solution to medium volume print requirements.

BBP™ 11 Printer Specification	
Recommended label production per day	500
Print speed	76.2mm per second
Max. Label width	118mm
Continuous Labels	Yes
Die cut labels	Yes
Print colour	Single colour printing
Memory	2MB
PC Connectivity	USB, Serial, Parallel, Internal Ethernet Able to be used with LabelMark and CodeSoft software (see page 251)
Stand-alone design	No
Print resolution	200 and 300dpi options
Serialisation function	Yes
Barcode function	Yes
Power Supply	AC Power included

For a comparison of specifications versus other printers, see pages 114-115.

### BBP™ 11 PRINTERS & ACCESSORY

Part No.	Description
361066	200dpi Printer with LabelMark™ Software
361072	300dpi Printer with LabelMark™ Software
361065	Media Stand (see information icon right)

For more information on LabelMark™ software, see page 117.



### MEDIA STAND FOR LARGER CORE LABELS

We recommend you purchase the BBP™ 11 printer media stand allowing you to print the full range of Brady desktop printer (THT) labels displayed in following pages.

A range of 25.4mm width core labels are available for the BBP™ 11 that do not require the external media stand. For a list of these parts, contact us.

### BBP™ 11 RIBBONS

BBP™ 11 Printers only use 70 metre ribbons designed specifically for this printer. The BBP™ 11 cannot be used with other desktop printer ribbons. ● = recommended ribbons

Ribbon Part No.	R-7942 804447	R-7950 804465	R-7950 804454	R-7950 804455	R-7950 804456	R-6000 804473	R-7990 804461
	Black	Black	Blue	Green	Red	Black	Blue
<b>Brady Material</b>							
B-342		●					
B-351							
B-390		●					
B-408	●						
B-422						●	
B-423						●	
B-424		●					
B-425			●	●	●		●
B-426		●					
B-427		●					
B-428		●					
B-429			●	●	●		
B-430						●	
B-432						●	
B-433						●	
B-434						●	
B-435						●	
B-436		●					
B-437		●					
B-438		●					
B-439			●	●	●	●	
B-457						●	
B-459						●	

Ribbon Part No.	R-7942 804447	R-7950 804465	R-7950 804454	R-7950 804455	R-7950 804456	R-6000 804473	R-7990 804461
	Black	Black	Blue	Green	Red	Black	Blue
<b>Brady Material</b>							
B-461		●					
B-473							●
B-477							●
B-478							●
B-479							●
B-483							●
B-484							●
B-486		●					
B-487							●
B-488		●					
B-489		●					
B-490		●					
B-492							●
B-497							●
B-498							●
B-499							●
B-593							●
B-7593							●
B-7641							●
B-7642							●
B-8423			●	●	●	●	●
B-8425							●